


VERTICAL AIR BEVELER

EXPLODED VIEW

-LEVER TYPE-

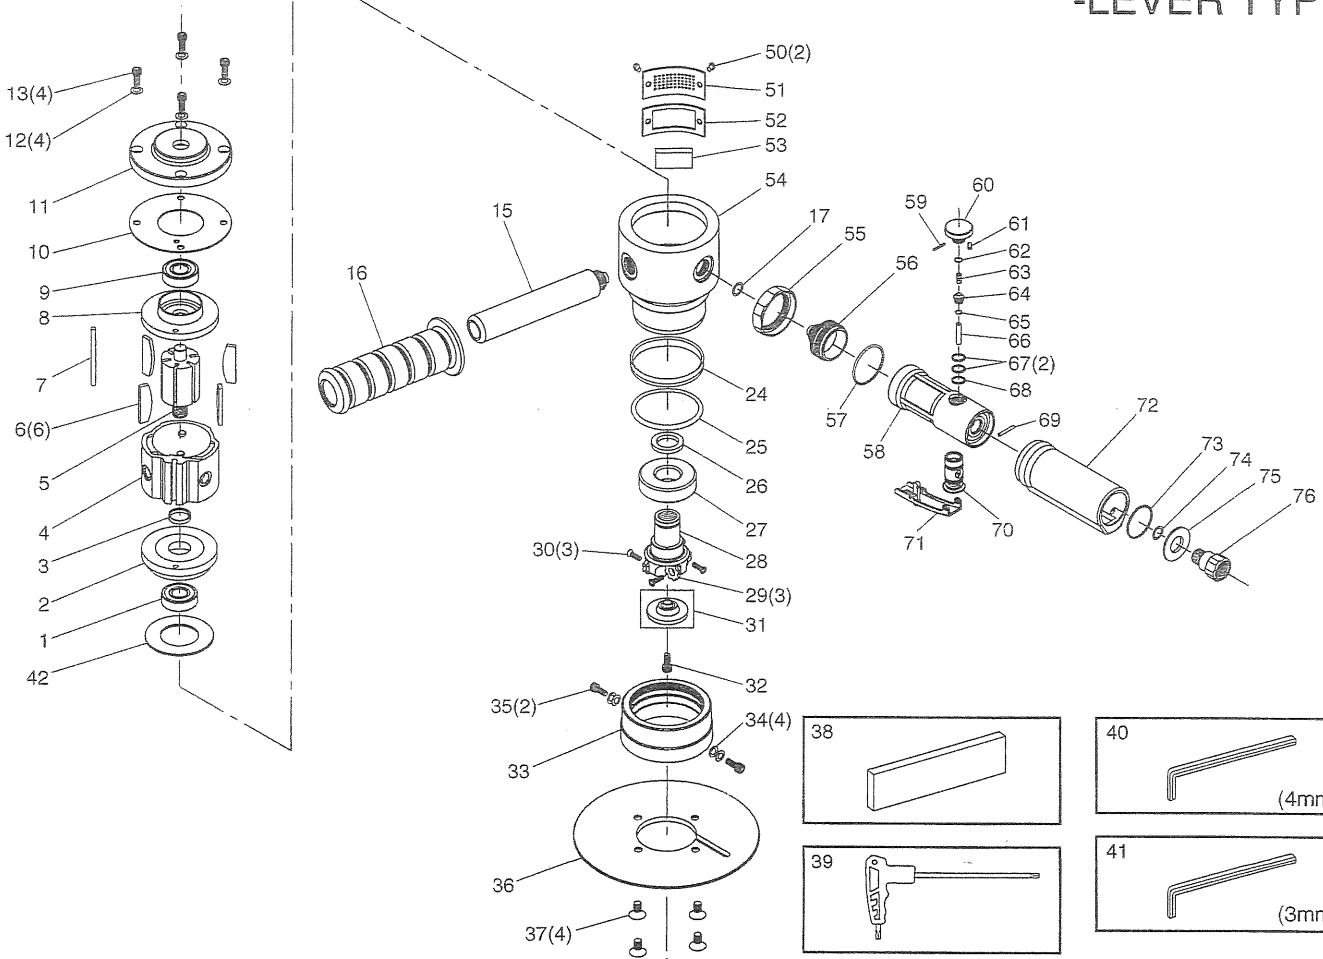

PARTS LIST

Index No.	Parts No.	Description	Qty. Per tool
1	251BV-01	Ball Bearing	1
2	251BV-02	Front End Plate	1
3	251BV-03	Collar	1
4	251BV-04	Cylinder	1
5	251BV-05	Rotor	1
6	251BV-06	Blade	6
7	251BV-07	Dowel Pin	1
8	251BV-08	Rear End Plate	1
9	251BV-09	Ball Bearing	1
10	251BV-10	Gasket	1
11	251BV-11	Housing Cap	1
12	251BV-12	Washer	4
13	251BV-13	Screw	4
15	251BV-15	Handle	1
16	251BV-16	Grip	1
17	251BV-17	O-Ring	1
24	251BV-24	Collar	1
25	251BV-25	O-Ring	1
26	251BV-26	Washer	1
27	251BV-27	Ball Bearing	1
28	251BV-28	Cutter Holder	1
29	251BV-29	Cutter (250ABV-R3.5 10pcs set)	3
30	251BV-30	Screw	3
31	251BV-31	Guide Roller Assy	1
32	251BV-32	Screw	1
33	251BV-33	Adjust Ring	1
34	251BV-34	Spring Washer	4
35	251BV-35	Screw	2
36	251BV-36	Flange	1
37	251BV-37	Screw	4
38	251BV-38	Cutter Holder Stopper	1
39	251BV-39	Torx Wrench	1

Index No.	Parts No.	Description	Qty. Per tool
40	251BV-40	Hex. Wrench (4mm)	1
41	251BV-41	Hex. Wrench (3mm)	1
50	251LBV-50	Screw	2
51	251LBV-51	Deflector	1
52	251LBV-52	Deflector Gasket	1
53	251LBV-53	Sponge	1
54	251LBV-54	Motor Housing	1
55	251LBV-55	Lock Ring	1
56	251LBV-56	Joint	1
57	251LBV-57	O-Ring	1
58	251LBV-58	Housing	1
59	251LBV-59	Spring Pin	1
60	251LBV-60	Regulator Dial	1
61	251LBV-61	Spring Pin	1
62	251LBV-62	O-Ring	1
63	251LBV-63	Valve Spring	1
64	251LBV-64	Valve	1
65	251LBV-65	O-Ring	1
66	251LBV-66	Valve Shaft	1
67	251LBV-67	O-Ring	2
68	251LBV-68	O-Ring	1
69	251LBV-69	Spring Pin	1
70	251LBV-70	Regulator	1
71	251LBV-71	Safety Lever Assy	1
72	251LBV-72	Housing Cover	1
73	251LBV-73	O-Ring	1
74	251LBV-74	O-Ring	1
75	251LBV-75	Seal Washer	1
76	251LBV-76	Inlet Bushing	1