



PARTS LIST

No.	Parts No.	Description	Q'ty
1	CT150-01	Hex. Bolt	1
2	CT150-02	Washer	1
3	CT150-03	Wheel Washer	2
4	CT150-04	Wheel Cover	1
5	CT150-05	Cap Screw	1
6	CT150-06	Retaining Ring	2
7	CT150-07	Shaft Washer	4
8	CT150-08	Drive Shaft	1
9	CT150-09	Grip Rubber	1
10	CT150-10	Retainer Ring	1
11	CT150-11	Retainer Spring	1
12	CT150-12	Lock Sleeve	1
13	CT150-13	Needle Bearing	2
14	CT150-14	Flex Shaft	1
15	CT150-15	Washer	1
16	CT150-16	Power Shaft	1
17	CT150-17	Lock Ring	1
18	CT150-18	Screw	2
19	CT150-19	Socket Joint	1
20	CT150-20	Steel Ball	2
21	CT150-21	Dent Spring	2
22	CT150-22	Screw	2
23	CT150-23	Spacer Ring	1
24	CT150-24	Spring Pin	1
25	CT150-25	Bearing	2
26	CT150-26	Front Plate	1

No.	Parts No.	Description	Q'ty
27	CT150-27	Spring Pin	2
28	CT150-28	Spacer	1
29	CT150-29	Grip Rubber	1
30	CT150-30	Rotor	1
31	CT150-31	Rotor Blade	4
32	CT150-32	Cylinder	1
33	CT150-33	Rear End Plate	1
34	CT150-34	Bearing	1
35	CT150-35	Housing	1
36	CT150-36	Valve Shaft	1
37	CT150-37	O-Ring	1
38	CT150-38	Throttle Valve	1
39	CT150-39	Valve Spring	1
40	CT150-40	O-Ring	1
41	CT150-41	Valve Screw	1
42	CT150-42	Housing Cover	1
43	CT150-43	Throttle Lever Ass'y	1
44	CT150-44	Spring Pin	1
45	CT150-45	Spring Pin	1
46	CT150-46	Muffler	1
47	CT150-47	O-Ring	1
48	CT150-48	Exhaust Sleeve	1
49	CT150-49	Inlet Bushing	1
50	CT150-50	Wrench (11mm)	2
51	CT150-51	Wheel	1